

---

# HOW TO READ THE WIRING DIAGRAMS

## CONTENTS

MODELS ..... 2



**MODELS****<HATCHBACK>**

Model code		Engine model	Transmission model	Fuel supply system
DA1A	LNSEL6/R6	4G92-SOHC (1,597 mL)	F5MR1 <5M/T>	MPI
	LNUEL6/R6			
	LNGEL6/R6			
	LRUEL6/R6		F4A41 <INVECS-II 4A/T>	
DA2A	LNUCL6/R6	4G93-DOHC (1,834 mL)	F5M42 <5M/T>	GDI
	LNGCL6/R6			
	LNXCCL6/R6			
	LRUCL6/R6		F4A42 <INVECS-II 4A/T with Sports Mode>	
	LRGCL6			
	LRXCCL6/R6			
DA5A	LNSFL6/R6	F9Q1 (1,870 mL)	F5MV1 <5M/T>	DI-D
	LNUFL6/R6			
	LNGVL6/R6	F9Q2 (1,870 mL)		
	LNXL6/R6			

**<SEDAN>**

Model code		Engine model	Transmission model	Fuel supply system
DA1A	SNSEL6/R6	4G92-SOHC (1,597 mL)	F5MR1 <5M/T>	MPI
	SNUEL6/R6			
	SRUEL6		F4A41 <INVECS-II 4A/T>	
DA2A	SNUCL6/R6	4G93-DOHC (1,834 mL)	F5M42 <5M/T>	GDI
	SNGCL6			
	SNXCCL6			
	SRXCCL6		F4A42 <INVECS-II 4A/T with Sports Mode>	
DA5A	SNSFL6/R6	F9Q1 (1,870 mL)	F5MV1 <5M/T>	DI-D
	SNUFL6/R6			
	SNUVL6	F9Q2 (1,870 mL)		
	SNGVL6/R6			