

# HOW TO READ THE WIRING DIAGRAMS

## CONTENTS

MODELS .....	2
--------------	---

## MODELS

### <HATCHBACK>

Model code		Engine model	Transmission model	Fuel supply system
DA1A	LNMEL6/R6	4G92 MPI (1,597mL)	F5MR1 <5M/T>	MPI (Electronically Controlled Multi Point Fuel Injection)
DA2A	LNMCL6/R6	4G93 GDI (1,834mL)	F5M42 <5M/T>	GDI (Gasoline Direct Injection)
	LRMCL6/R6		F4A42 <INVECS-II 4A/T>	
DA5A	LNMFL6/R6	F9Q1 (1,870mL)	F5MV1 <5M/T>	DI-D (Direct Injection Diesel)
	LNMVL6/R6	F9Q2 (1,870mL)		

### <SEDAN>

Model code		Engine model	Transmission model	Fuel supply system
DA1A	SNMEL6	4G92 MPI (1,597mL)	F5MR1 <5M/T>	MPI (Electronically Controlled Multi Point Fuel Injection)
DA2A	SNMCL6	4G93 GDI (1,834mL)	F5M42 <5M/T>	GDI (Gasoline Direct Injection)
	SRMCL6		F4A42 <INVECS-II 4A/T>	
DA5A	SNMFL6	F9Q1 (1,870mL)	F5MV1 <5M/T>	DI-D (Direct Injection Diesel)
	SNMVL6	F9Q2 (1,870mL)		
DA6A	SNSEL6/R6	4G13 MPI (1,298mL)	F5MR1 <5M/T>	MPI (Electronically Controlled Multi Point Fuel Injection)
	SNUEL6/R6			