# www.WorkshopManuals.co.uk SERVICE BULLETIN

#### SERVICE GROUP, WARRANTY & SERVICE DEP. MITSUBISHI MOTOR SALES EUROPE BV

SERVICE BULLETIN No.: ESB-96E52-002				
		Date: 1997-04-15	<model></model>	<m y=""></m>
Subject:	ADDITION OF SRS AIR BA	G MAINTENANCE	ECLIPSE(D30) CARISMA	96-10 96-10
Group:	INTERIOR			
INFORMAT	ION	O. Kai - E.V.P. & G.M. After Sales Service Dept.		

## 1. Description:

MITSUBISHI

In the SRS air bag troubleshooting, items of cause of trouble in the inspection procedure for each diagnostic trouble code, have been added.

# 2. Applicable Manuals:

Manual	Pub. No.	Language	Page(s)
'96 ECLIPSE Workshop Manual chassis	PWUE96E1	(English)	52B-9
	PWUS95E1	(Spanish)	
	PWUF95E1	(French)	
	PWUG95E1	(German)	
	PWUD95E1	(Dutch)	
	PWUI95E1	(Italian)	
'96 CARISMA Workshop Manual chassis	PWUE9502	(English)	52B-7
	PWUS9503	(Spanish)	
	PWUF9504	(French)	
	PWUG9505	(German)	
	PWUD9506	(Dutch)	
	PWUW9507	(Swedish)	
	PWUI96E1	(Italian)	

## 3. Details:

'96 ECLIPSE Workshop Manual chassis Page 52B-9 '96 CARISMA Workshop Manual chassis Page 52B-7

# 52B-7 WWW.Wosks Troubleshooting IS.CO.uk

Code No.	Diagnosis item	Reference page
45	SRS-ECU non-volatile memory (EEPROM) and A/D converter system	52B-13
51,52	Driver's side air bag module (squib ignition drive circuit) system	52B-14
54,55	Passenger's side air bag module (squib ignition drive circuit) system	52B-14
56,57	Driver's side pre-tensioner (squib ignition drive circuit) system	52B-14
58,59	Passenger's side pre-tensioner (squib ignition drive circuit) system	52B-14

#### NOTE

- (1) \*1: Vehicles with front passenger's air bag.
- (2) \*2: This diagnosis code will be automatically cleared from memory and the SRS warning lamp will switch off when the system returns to normal.
- (3) If the vehicle has a discharged battery it will store the fault codes 41 or 42. When these diagnosis codes are displayed, check the battery.

# INSPECTION PROCEDURE CLASSIFIED BY DIAGNOSIS CODES

Code No. 14 Analog G sensor system	Probable cause
The SRS-ECU monitors the analog G sensor output and outputs this code when it detects a sensor failure, abnormal sensor characteristics or abnormal sensor output.	Malfunction of SRS-ECU

Replace the SRS-ECU

Code No. 15 Safing G sensor system	Probable cause
This code is output when there is a short-circuit between the terminals of the safing G sensor. The cause of the problem is probably a short-circuit in the safing G sensor.	Malfunction of SRS-ECU

Replace the SRS-ECU

Code No. 21 or 22 Driver's side air bag module (squib) system	Probable cause	
These diagnosis codes are output if there is abnormal resistance between the terminals of the safing G sensor. The cause of the problem is probably a short-circuit in the safing G sensor.	<ul> <li>Malfunction of clock spring <added></added></li> <li>Open-circuit in clock spring due to inappropriate neutral position.</li> <li>Malfunction of harness or connectors</li> <li>Malfunction of driver's side air bag module (squib)</li> <li>Malfunction of SRS-ECU</li> </ul>	

## Chart 1

Code No.	Trouble symptom	
21	<ul> <li>Short in driver's side air bag module (squib) or harness short</li> <li>Short in clock spring</li> </ul>	
22	<ul> <li>Open circuit in driver's side air bag module (squib) or open harness</li> <li>Open circuit in clock spring</li> <li>Disconnected connector in the driver's side air bag module (squib)</li> <li>Open circuit in clock spring due to inappropriate neutral position</li> <li>Malfunction of connector contact</li> </ul>	<added></added>

# www.Workshroubleshootingals.co.uk

# 52B-9



#### Chart 1

Code No.	Trouble symptom	
21	<ul> <li>Short in driver's side air bag module (squib) or harness short</li> <li>Short in clock spring</li> </ul>	
22	<ul> <li>Open circuit in driver's side air bag module (squib) or open harness</li> <li>Open circuit in clock spring</li> <li>Disconnected connector in the driver's side air bag module (squib)</li> <li>Open circuit in clock spring due to inappropriate neutral position</li> <li>Malfunction of connector contact</li> </ul>	<added></added>
61	The harness wire of the driver's air bag module (squib) is grounded to the power supply.	
62	The harness wire of the driver's air bag module (squib) is grounded.	

