# www.WorkshopManuals.co.uk SERVICE BULLETIN



### PUBLICATION GROUP, AFTER SALES SERVICE DEP. MITSUBISHI MOTOR SALES EUROPE BV

SERVICE BULLETIN		No.: ESB-99E35-505			
		Date: 2000-07-15	<mode< th=""><th> &gt;</th><th><m y=""></m></th></mode<>	>	<m y=""></m>
Subject:	ADDITION OF DIAGNOSTIC NO.15	TROUBLE CODE	(EC) CARISI	AN	98-10
Group:	SERVICE BRAKE				
CORRECTIO	N	O. Kai - E.V.P. & G.M After Sales Service Dept			
1. Descriptio	n:	·			
For the troubl	eshooting of the ABS and the	TCL, diagnostic troub	le code No.15	has bee	en added.
2. Applicable Manuals:					
	Manual	Pub. No.	Language		age(s)
'98 CARISMA		PWDE9502-B	(English)	35B-1 a	and 2
Workshop Manual		PWDS9503-B	(Spanish)		
(except GDI) Chassis		PWDF9504-B	(French)		
		PWDG9505-B	(German)		
		PWDD9506-B	(Dutch)		
		PWDW9507-B	(Swedish)		
		PWDI96E1-B	(Italian)		
'00 CARISMA	A	PWDE9502-D	(English)	35C-10	
Workshop Ma	anual	PWDS9503-D	(Spanish)		
Chassis		PWDF9504-D	(French)		
		PWDG9505-D	(German)		
		PWDD9506-D	(Dutch)		
				•	
1		PWDW9507-D	(Swedish)		

### 3.details:

'98 CARISMA Workshop Manual Chassis (page 2,3,4) '00 CARISMA Workshop Manual Chassis (page 5)

## GROUP 35B ANTI-SKID BRAKING SYSTEM (ABS) <2WD>

## GENERAL

## **OUTLINE OF CHANGES**

- The hydraulic unit has been changed.
- ABS-ÉCU connectors have been changed. Correspond to this, troubleshooting and inspection procedure for the wheel speed sensor have been changed.

## TROUBLESHOOTING INSPECTION CHART FOR DIAGNOSIS CODES

Inspect according to the inspection chart that is appropriate for the malfunction code.

Diagnosis code No.	Inspection item	Diagnosis content	Reference page	
11	Front right wheel speed sensor	Open circuit	35B-2	
12	Front left wheel speed sensor			
13	Rear right wheel speed sensor		<added></added>	
14	Rear left wheel speed sensor		+	
15	Wheel speed sensor	Abnormal output signal	See page 4 of this S/B	
16	Power supply system		35B-2	
21	Front right wheel speed sensor	Short circuit	35B-2	
22	Front left wheel speed sensor			
23	Rear right wheel speed sensor			
24	Rear left wheel speed sensor			
38	Stop lamp switch system		35B-3	
41	Front right inlet solenoid valve		35B-9	
42	Front left inlet solenoid valve	(replace the hydraulic unit assembly)		
43	Rear right inlet solenoid valve			
44	Rear left inlet solenoid valve			
45	Front right outlet solenoid valve			
46	Front left outlet solenoid valve	-		
47	Rear right outlet solenoid valve			
48	Rear left outlet solenoid valve			
51	Valve power supply		35B-3	
53	Pump motor		35B-4	
63	ABS-ECU		35B-9 (Replace the hydraulic unit assembly)	

#### **INSPECTION PROCEDURE FOR DIAGNOSIS CODES**


Code Nos.11, 12, 13 and 14 Wheel speed sensor open circuit	Probable cause		
Code Nos.21, 22, 23 and 24 Wheel speed sensor short circuit			
Code Nos.11,12, 13 and 14 are output if the ABS-ECU detects an open circuit in any one of the four wheel speed sensor	<ul> <li>Malfunction of wheel speed sensor</li> <li>Malfunction of wiring harness or connector</li> <li>Malfunction of ABS-ECU</li> </ul>		
<ul> <li>Code Nos.21, 22, 23 and 24 are output in the following cases.</li> <li>When there is input from any one of the four wheel speed sensors when travellin at 12 km/h or more, even though open circuit verified.</li> <li>When a chipped or blocked-up ABS rotor is detected during driving at 12 km/h or more</li> </ul>	<ul> <li>Malfunction of wheel speed sensor</li> <li>Malfunction of wiring harness or connector</li> <li>Malfunction of rotor</li> <li>Malfunction of ABS-ECU</li> <li>Malfunction of wheel bearing</li> </ul>		

Wheel speed sensor installation inspection.	NG	→ Repair			
Measure at the ABS-ECU connecto A-48 Disconnect the connector a measure from the harness side. Resistance values between 1 and 3, and 5, 6 and 7, 8 and 9. Ok: 1.28- 1.92 kΩ	NG	Check the following of A-21, A-49, B-52, D-	12, D-13, D-17 OK	NG	<ul> <li>Repair</li> <li>Check the harness wire between each wheel speed sensor and ABS-ECU,</li> </ul>
♦ OK Wheel speed sensor output voltage inspection (Refer to P.35B-8) ♦ OK Check the following connector:A-48 ♦ NG Replace the hydraulic unit assembly.	<u>NG</u> NG	Rotor inspection	, ОК	NG NG	<ul> <li>Replace the wheel speed sensor.</li> <li>Replace the rotor</li> <li><added></added></li> <li>Followed by next page.</li> </ul>
Code No. Power supply system The voltage of the ABS-ECU power supply drops lower or rises higher than the specified value. If the voltage returns to the specified value, this code is no longer output.			<ul> <li>Probable cau</li> <li>Malfunction of Malfunction of</li> </ul>	of wiring harne	ess or connector.


#### Caution


If battery voltage drops or rises during inspection, this code will be output as well. If the voltage returns to standard value, this code is no longer output.

Before carrying out the following inspection, check the battery level, and refill it if necessary.

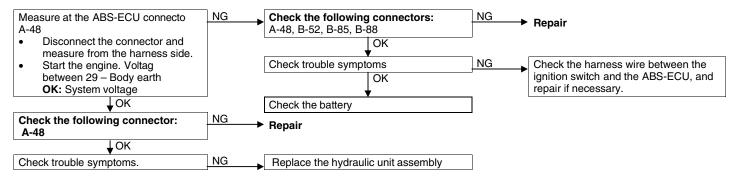

# www.WorkshopManuals.co.uk

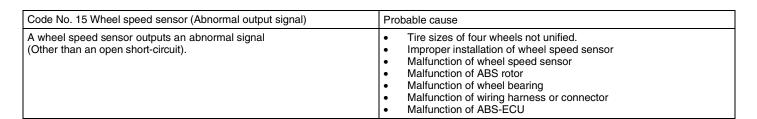

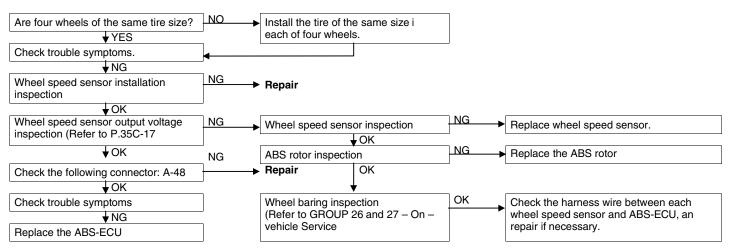

★: Refer to Basic Manual (Pub. No. PWDE9502)

## **INSPECTION CHART FOR DIAGNOSIS CODES**

Inspect according to the inspection chart that is appropriate for the malfunction code.

Diagnosis code No.	Inspection item	Diagnosis content	Reference page	
11	Front right wheel speed sensor	Open circuit	Refer to ' 98 CARISMA	
12	Front left wheel speed sensor		Workshop Manual – GROUP 35B – Troubleshooting	
13	Rear right wheel speed sensor		COD Houseshooling	
14	Rear left wheel speed sensor			
15	Wheel speed sensor Abnormal output sign		Refer to '98 CARISMA Workshop	
<added></added>			Manual – GROUP 35B Troubleshooting	
16	Power supply system		Refer to '98 CARISMA Workshop Manual - GROUP 35B – Troubleshooting	
21	Front right wheel speed sensor	Short circuit	Refer to '98 CARISMA Workshop	
22	Front left wheel speed sensor		Manual – GROUP 35B – Troubleshooting	
23	Rear right wheel speed sensor			
24	Rear left wheel speed sensor			
25	Engine speed		35C-10	
31	TLC solenoid valve (inlet)			
32	TLC solenoid valve (outlet)			
33	TLC solenoid valve (inlet)			
34	TLC solenoid valve (outlet)			
38	Stop lamp switch system		Refer to '98 CARRISMA Workshop Manual – GROUP 35B - Troubleshooting	
41	Front right inlet solenoid valve		35C-10	
42	Front left inlet solenoid valve			
43	Rear right inlet solenoid valve			
44	Rear left inlet solenoid valve			
45	Front right outlet solenoid valve			
46	Front left outlet solenoid valve			
47	Rear left outlet solenoid valve			
48	Rear left outlet solenoid valve			
51	Valve power supply		35C-10	
53	Pump motor		35C-10	
63	ABS-ECU		Refer to '98 CARRISMA Workshop Manual – GROUP 35B – Troubleshooting (Replace the Hydraulic unit assembly)	